

Basic Specification	
Model	YH150C7-100 (Including Extended Model)
Type	Low Side Shell Design Scroll Compressor
Application	Air conditioning
Power	5 HP
Capacity (BTU/Hr)	62440
Refrigerant	R410A
Displacement(cc/rev)	59.2
Cooling Capacity (W) ^(a)	18300
Input Power (W) ^(a)	5874
RLA (A) ^(a)	18
Cooling COP(W/W) ^(a)	3.12
Power Supply	208-230V/3~/60Hz
Min. Operating Voltage(V)	187
Max. Operating Voltage(V)	253
LRA(A)	136
Max. Operating Current(A) ^(b)	27.17
Rated Speed(r/min) ^(a)	3500
Compressor Weight (With Oil)(kg)	31
Oil Type	POE
Oil Kinematic Viscosity(cSt, 40°C)	32
Oil Density(kg/L, 20°C)	0.977
Primary Charge(L)	1.6
Recharge(L)	1.45
Oil Circulation Rate ^(a)	≤1%
Rated Sound(Sound Power)(dBA) ^(c)	71
Max. Operating Sound in Running Envelope (Sound Power)(dBA)	76
Vibration Displacement Peak-Peak(mm) ^(d)	≤0.1
Moisture(mg)	≤600
Impurity(mg)	≤120
LVS(V) ^(e)	177
MOV (V) ^(f)	187
Start Capacitor(μF/V)	/
Start Relay	/
Run Capacitor(μF/V)	/
IP Class of Terminal Box	IP21
Compressor Color	Black

Motor Parameters	
Motor Type	Three-phase asynchronous motor
Motor Pole	2
Motor Insulation Class(°C)	130(B Class)
Line to Line Resistance UV(CS)(Ω, 25°C)	0.572(±10%)
Line to Line Resistance UW(CR)(Ω, 25°C)	0.572(±10%)
Line to Line Resistance VW(SR)(Ω, 25°C)	0.572(±10%)
Dielectric Strength	2000VAC / 1s / 60Hz, Leakage Current≤5mA
Insulation Resistance(MΩ)	≥20
Ground Resistance(Ω)	≤0.1

Safety Operating Limit	
Tightness Test Pressure (MPa)	3.8-4.0
Max. Operating Pressure	
High Side(MPa) Low Side(MPa)	H4.3/L2.0
Compressor FreeSpace (Without Oil)	
High Side(L) Low Side(L)	H1.0/L3.6
Max. Refrigerant Charge(kg)	See Notes
Discharge Temperature Limit(°C)	≤125 (120mm to compressor discharge connection and well insulated)
Start-Stop Interval	See Notes

Performance Condition:

Condition	Condition Description
a	Rated Condition
b	Max. Load Condition, 90% Rated Voltage
c	Rated Condition, A Weighted Sound Power
d	Rated Condition, Max Operating Normal Displacement of Compressor Housing
e	Discharge Pressure and Suction Pressure: Saturated Refrigerant Pressure at 40°C
f	Max. Load Condition

Rated Condition, 48 Hours Break-in-Running before implementing
Performance and Sound Testing

Item	Rated Condition	Max. Load Condition
E.T.(°C)/C.T.(°C)/S.H.(K)/ S.C.(K)/A.T.(°C)	7.2/54.4/11.1/8.3/35	11.9/65.5/11.9/8.3/46.1
Cooling Capacity Deviation	≥95.0%	-
Power Deviation	≤105.0%	-
COP Deviation	≥95.0%	-


Internal Protector

Protection Method	Config	Parameter		
Internal Overload Protector	With	Vendor	Vendor 1	Vendor 2
		Model	UP28LA05B-XX	
		Open Temp.(°C)	125±5	
		Close Temp. (°C)	70±10	
		Short Time Trip	103A 3-10s	A S
Internal Pressure Relieve Valve	Without	3.97-4.3 MPa		

Accessory

Item	Name	P.N.	PCS
1	Grommet	070-0003-00	4
2	Sleeve	010-0014-00	4

Compressor Operating Envelope

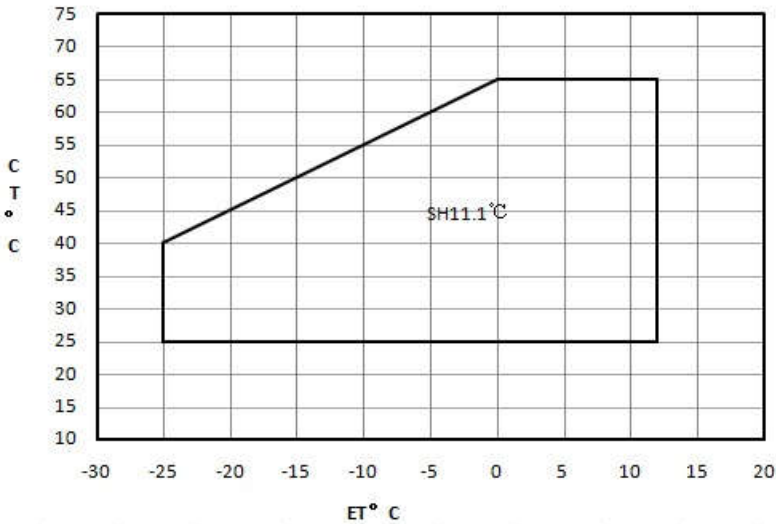

- EVI control logic (only for EVI module)
- Recommend system subcooling 5K
 - DLT≤95°C,control superheat of injection line=5K
 - DLT>95°C,control DLT=95°C
 - Max injection pressure≤2.0MPa


- Compressor Performance Sheet
- » Performance Based on Superheat is within the Operating Envelope, Subcooling after Condenser is 8.3K;
 - » Performance Calculated by Coefficients of Polynomial is Only Suitable for the Condition within Operating Envelope
 - » Capacity, Power can be Calculated by Coefficients of Polynomial

Performance Table					
Item	E.T.(°C)	-20	-10	0	10
	C.T.(°C)				
Heating Cap. (W) (Cooling Cap.)	50				
	40				
	30				
Cooling Cap. (W)	50	6175	10205	14994	21323
	40	7475	11668	16897	23943
	30	8594	13045	18811	26671
Power(W)	50	5661	5500	5357	5287
	40	4447	4329	4238	4229
	30	3480	3417	3390	3455



Ten Coefficients of Polynomial			
Expression	$z = p_0 + p_1 \cdot x + p_2 \cdot y + p_3 \cdot x^2 + p_4 \cdot x \cdot y + p_5 \cdot y^2 + p_6 \cdot x^3 + p_7 \cdot x^2 \cdot y + p_8 \cdot x \cdot y^2 + p_9 \cdot y^3$		
Description	z: Cooling Capacity(W) or Power (W) Specially: Heating Capacity(W)=Cooling Capacity(W)+Power (W) x: E.T. °C y: C.T. °C p0~p9: Coefficients of Polynomial		
Cooling Cap. Factor	Value	Power Factor	Value
p0	28755.950727	p0	937.806423
p1	928.632583	p1	28.83993
p2	-519.346989	p2	110.137803
p3	14.634491	p3	0.595964
p4	-10.125147	p4	-1.110825
p5	8.32976	p5	-1.712955
p6	0.130167	p6	0.009178
p7	-0.138674	p7	-0.004667
p8	0.048219	p8	0.006044
p9	-0.068952	p9	0.02556

Notes: Coefficients of polynomial are based on the fitting results of some sample data, which can be used as a reference of compressor selection, but cannot completely eliminate customer's test.

Drawings Outline Drawing

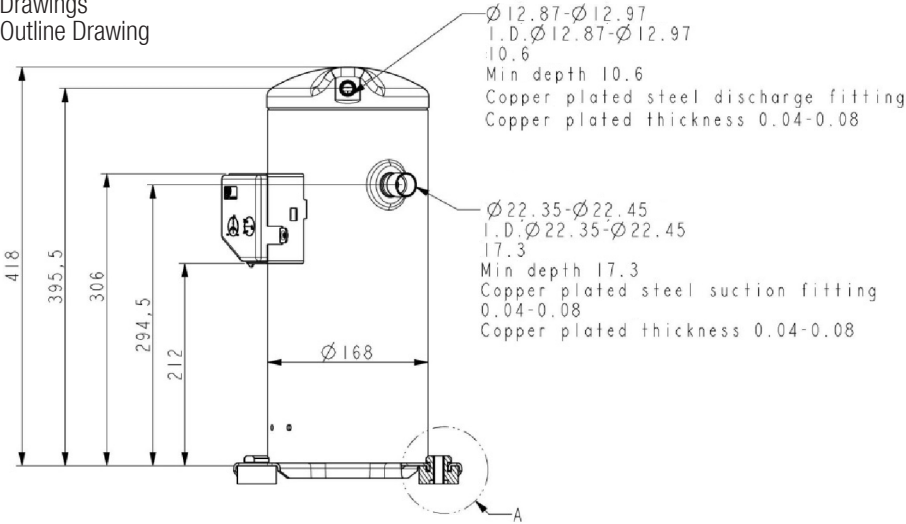


T-Box Layout Standard

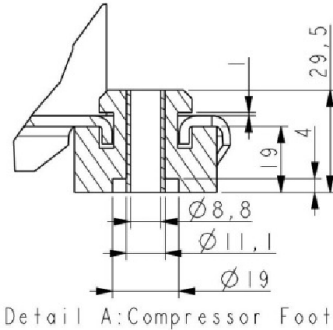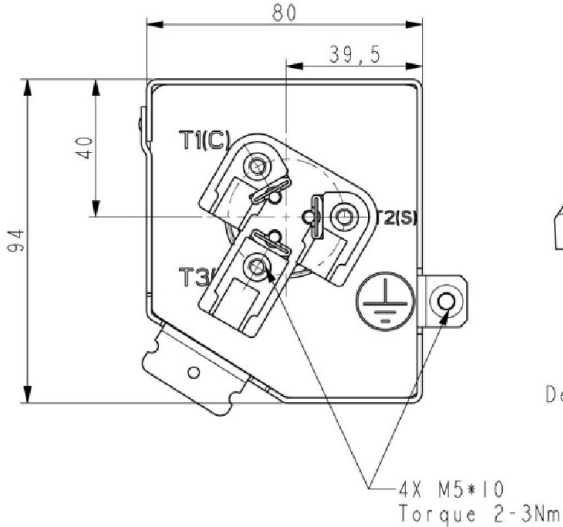


Notes

- » It is not allowed to perform vacuum in the system by using the refrigeration compressor. The compressor can start only after the refrigerant charged. In some cases, such as on the field site, if it is limited by the situation that can't charge the required volume of refrigerant, 50% of the required refrigerant is charged necessary before the compressor starts. Double check the system and make sure everything is under safe status, then power on the compressor and charge the remained refrigerant when the compressor is running.
- » It is not allowed to charge the refrigerant from the suction or discharge line closes to the compressor. The charge port should be arranged on the connection pipe of suction line accumulator or receiver, which is on the side far away to the compressor, to avoid the liquid refrigerant flood back.
- » Refrigerant charge limitation: the ratio between the weight of oil and refrigerant should be ≥ 0.4 .
- » It is not allowed to vacuum by compressor, not allowed to run the compressor without refrigerant, and not allowed to run the compressor on the reversed direction for long duration.
- » The compressor can only work with approved refrigerant.
- » The compressor is not allowed to work outside its envelope, the system should guarantee the suction line superheat and avoid the liquid refrigerant flood back.
- » When the suction and discharge plugs are removed, the assembly and brazing should be done in 15 minutes.
- » The frequently start/stop should be avoided. The suggested minimum continuous running time is 10 minutes to guarantee the safe oil level ($\geq 50\%$ initial charge volume), the suggested minimum interval duration between start and stop is 3 minutes.
- » The deviation of supplied voltage should be less than $\pm 10\%$ of rated voltage.
- » A 70W crankcase heater is recommended to avoid the refrigerant migration during the off circle and flood start. The crankcase heater should be power on 12 hours earlier than the first start or restart after long duration off.
- » The system should be equipped with necessary protection devices, such as pressure, temperature, oil return, overcurrent and phase fault, etc.
- » The compressor is not allowed to lay down or place upside down during transportation, stock and installation. The maximum inclination is 15° when the compressor is running.

Grommet Drawing

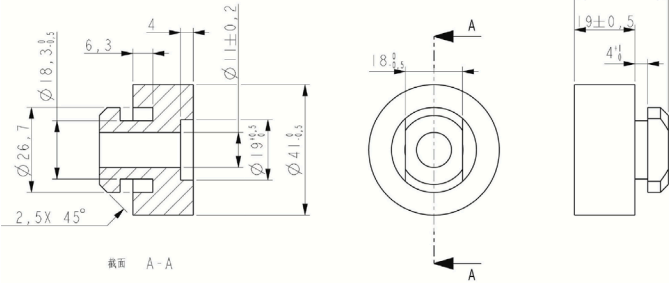

Sleeve Drawing

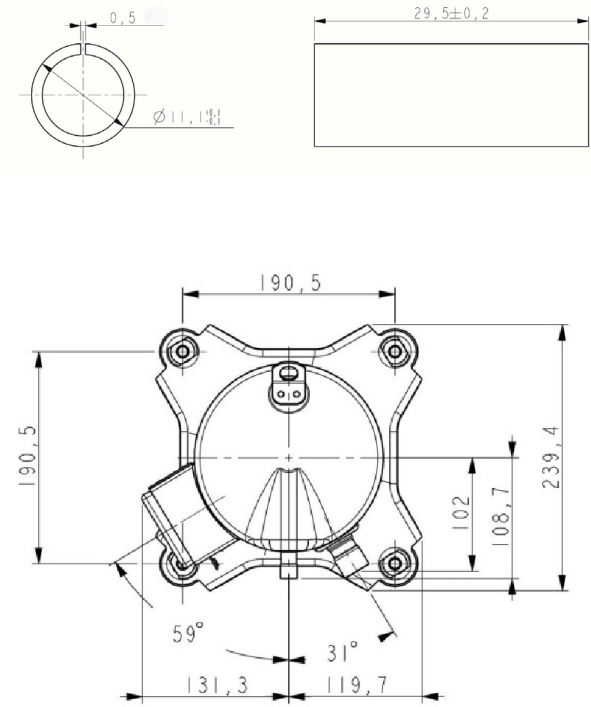

- » Single Phase Compressor Wiring Diagram Only for single phase

Application

- » See Details in the YH serial air-condition scroll compressor application manual